



WATERFLUX 3000 Technical Datasheet

Electromagnetic flow sensor

- Easy installation without straight inlet or outlet lengths
- For installation in small spaces
- Wide range of approvals for potable water



The documentation is only complete when used in combination with the relevant documentation for the signal converter.


1	Product features	3
<hr/>		
1.1	The flow sensor with an unique rectangular design	3
1.2	Options	5
1.3	Measuring principle.....	7
2	Technical data	8
<hr/>		
2.1	Technical data.....	8
2.2	Legal metrology.....	13
2.2.1	MID Annex III (MI-001).....	13
2.2.2	Verification to MI-001	15
2.3	Measurement accuracy	16
2.3.1	WATERFLUX 3050, 3100 and 3300 without straight inlet and outlet sections	17
2.4	Dimensions and weights	18
2.5	Pressure loss.....	22
3	Installation	23
<hr/>		
3.1	General notes on installation	23
3.2	Intended use	23
3.3	Pre-installation requirements	23
3.4	General requirements	24
3.4.1	Vibrations	24
3.4.2	Magnetic field.....	24
3.5	Installation conditions	25
3.5.1	Inlet and outlet section	25
3.5.2	T-section	25
3.5.3	Open discharge	25
3.5.4	Bends	26
3.5.5	Pump	27
3.5.6	Control valve	27
3.5.7	Air venting and vacuum forces	28
3.5.8	Flange deviation	29
3.5.9	Mounting position.....	29
3.5.10	Installation in a metering pit and subsurface applications.....	30
3.6	Mounting	31
3.6.1	Torques and pressures	31
4	Electrical connections	34
<hr/>		
4.1	Safety instructions.....	34
4.2	Grounding	34
4.3	Connection diagrams	34
5	Notes	35
<hr/>		

1.1 The flow sensor with an unique rectangular design

The strengths of the **WATERFLUX 3000** sensor lies in its unique construction with a rectangular and reduced cross section and its efficient coil construction. The coils provide a stronger and more homogeneous magnetic field, leading to an improved signal to noise ratio. The measurement is therefore independent of the flow profile and measurements are very stable. This results in a very good low flow performance, with a minimal pressure drop and as such a minimal impact on the pressure strategy of the network.

Because of the unique **WATERFLUX 3000** flow sensor design, whereby the mean flow velocity and flow profile are optimized within the rectangular and reduced cross-section, the additional uncertainty for upstream disturbances is drastically reduced. The water meter can be installed directly behind an elbow or reducer in the pipe without a straight inlet or outlet lengths. A substantial reduction of the required inlet and outlet sections offers the option to reduce the size of the measurement pits.

The Rilsan® coating of the flow sensor is chemically resistant, durable and maintenance-free, flexible and tough, smooth and pore-free and free of solvents. The coating is widely used in the water industry and has received a wide range of drinking water certifications.

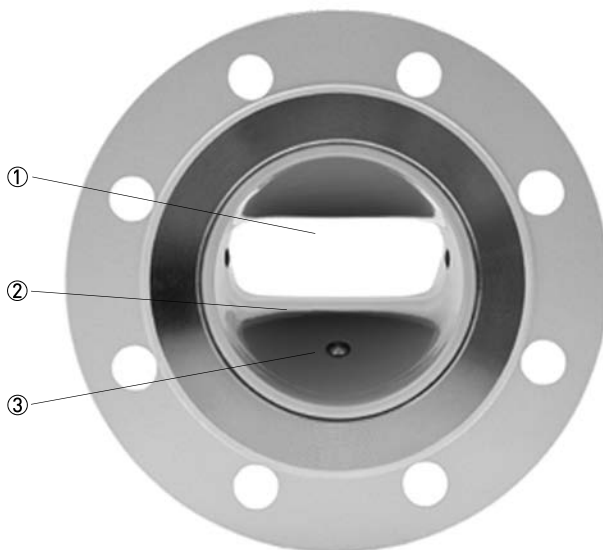

- ① Unique flow sensor design with rectangular cross section
- ② Rilsan® coating
- ③ Built-in reference electrode

Highlights

- Unique rectangular sensor construction results in good low flow performance and a large turndown ratio
- Large measuring range. High accuracy at peak as well as low flows
- Compliant with requirements for custody transfer (MID MI-001, ISO4064, EN 14154)
- Standard inhouse wet calibration
- Optional verification to MID Annex III (MI-001) for water meters (Module B and D)
- No inlet or outlet sections required when installed e.g. behind an elbow or reducer
- Bi-directional flow measurements
- Reference electrode. No grounding rings needed
- Suitable for subsoil installation and constant flooding (IP68).
- Special subsoil coating for subsurface installation
- Rilsan® polymer coating
- Drinking water approvals including ACS, DVGW, NSF, TZW and WRAS
- Long term reliability and maintenance free.
No moving parts, no wear and no obstruction in the flow
- Low pressure drop and minimal pressure impact on the network

Industries

- Water abstraction
- Distribution networks
- District metering
- Revenue metering

Applications

- Measurement of potable water
- Measurement of raw water and irrigation water
- Outlet of water purification plants
- Monitoring of distribution networks
- Water consumption and billing

1.2 Options



Remote or compact version

The WATERFLUX 3050, 3100 or 3300 is available in a compact or remote (field) version. The remote version of the signal converter can be installed on a wall, a pipe or in a rack. The functionality of the compact and the remote version is identical.



Mains or battery powered

Where mains power is available, the WATERFLUX 3000 sensor can be combined with the IFC 100 and IFC 300 signal converter. The WATERFLUX 3000 sensor can also be combined with the battery powered IFC 070 signal converter. For detailed information on the battery powered WATERFLUX 3070 please refer to the relevant documentation.



Maintenance free and buriable

The flow sensor (IP68) is suitable for submersion in flooded measurement chambers. With its robust construction it can also be buried underground. This can be a major cost saving as it eliminates the need for a measurement chamber. To protect the flow sensor a special coating is available. The remote version has an IP68 stainless steel connection box.

Custody transfer

In combination with the IFC 300 signal converter the WATERFLUX 3000 can be used for custody transfer applications. Optionally the WATERFLUX 3300 can be verified according to Annex III (MI-001) of the Measuring Instrument Directive (MID). All water meters for legal metrology purposes in Europe require certification under the MID.



1.3 Measuring principle

An electrically conductive fluid flows inside an electrically insulated pipe through a magnetic field. This magnetic field is generated by a current, flowing through a pair of field coils.

Inside of the fluid, a voltage U is generated:

$$U = v * k * B * D$$

in which:

v = mean flow velocity

k = factor correcting for geometry

B = magnetic field strength

D = inner diameter of flowmeter

The signal voltage U is picked off by electrodes and is proportional to the mean flow velocity v and thus the flow rate Q . A signal converter is used to amplify the signal voltage, filter it and convert it into signals for totalizing, recording and output processing.

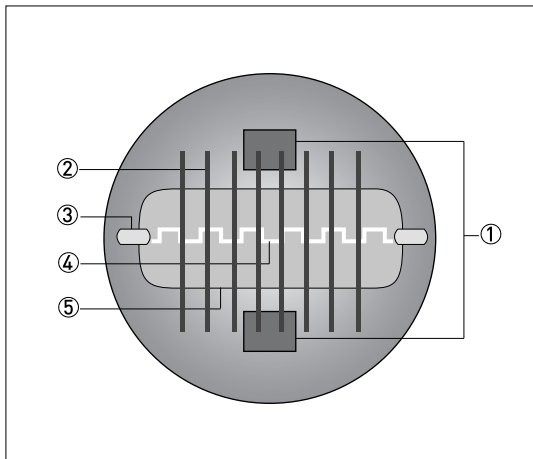


Figure 1-1: Measuring principle

- ① Field coils
- ② Magnetic field
- ③ Electrodes
- ④ Induced voltage (proportional to flow velocity)
- ⑤ Rectangular cross section

Rectangular cross section

The minimal height of the measuring tube decreases the distance between the field coils (1), resulting in a stronger and more homogeneous magnetic field (2). In addition, the mean flow velocity v increases due to the rectangular and reduced cross section. The large electrode spacing (D) and the increased flow velocity results in a higher magnetic signal voltage, also in the presence of a low flow rate.

2.1 Technical data

- *The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.*
- *Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Downloadcenter).*

Measuring system

Measuring principle	Faraday's law of induction
Application range	Electrically conductive fluids
Measured value	
Primary measured value	Flow velocity
Secondary measured value	Volume flow

Design

Features	Unique rectangular flow sensor design providing improved flow profile and signal to noise ratio resulting in highest accuracy and large turndown ratio
	Rilsan® polymer coated flow sensor approved for drinking water
	No internal or moving parts
	Built-in reference electrode
Modular construction	The measurement system consists of a flow sensor and a signal converter. It is available as compact and as separate version. More information about the signal converter can be found in the relevant documentation.
Compact version	With signal converter IFC 050: WATERFLUX 3050 C
	With signal converter IFC 100: WATERFLUX 3100 C
	With signal converter IFC 300: WATERFLUX 3300 C
Remote version	In wall (W) mount version with IFC 050 signal converter: WATERFLUX 3050 W
	In wall (W) mount version with IFC 100 signal converter: WATERFLUX 3100 W
	In field (F), wall (W) or rack (R) mount version with signal converter IFC 300: WATERFLUX 3300 F, W or R
Nominal diameter	DN25...600 / 1...24": Rectangular bore

Measuring accuracy

Maximum measuring error	IFC 050: down to 0.5% of the measured value ± 1 mm/s
	IFC 100: down to 0.3% of the measured value ± 1 mm/s
	IFC 300: down to 0.2% of the measured value ± 1 mm/s
	The maximum measuring error depends on the installation conditions.
	For detailed information refer to <i>Measurement accuracy</i> on page 16.
Repeatability	DN25...300 / 1...12": $\pm 0.1\%$ ($v > 0.5$ m/s / 1.5 ft/s) DN350...600 / 14...24": $\pm 0.2\%$ ($v > 0.5$ m/s / 1.5 ft/s)
Calibration / Verification	Standard:
	2 point calibration by a direct volume comparison.
	Option (for DN25...600):
	Verification to Measurement Instrument Directive (MID), Annex III (MI-001). Standard: Verification at Ratio (Q3/Q1) = 80, Q3 ≥ 2 m/s / 6.6 ft/s Optional: Verification at Ratio (Q3/Q1) > 80
MID Annex MI-001 (Directive 2014/32/ EU / UK Regulation 2016 No. 1153)	Only in combination with the IFC 300 signal converter.
	EC-Type examination certificate to MID Annex III (MI-001)
	Only in combination with the IFC 300 signal converter.
	Diameter range: DN25...600 / 1...24"
	Minimum straight inlet flow: 0 DN
	Minimum straight outlet flow: 0 DN
	Forward and reverse (bi-directional) flow
	Orientation: any
	Ratio (Q3/Q1) up to 640
	Liquid temperature range: + 0.1°C / 50°C
	Maximum operating pressure: \leq DN200 / 8": 16 bar / 232 psi, \geq DN250 / 10": 10 bar / 145 psi
	For detailed information refer to <i>Legal metrology</i> on page 13.

Operating conditions

Temperature	
Process temperature	-5...+70°C / +23...+158°F
Ambient temperature	Standard: DN25...200, remote or compact version with aluminium converter housing and with stainless steel flanges: -40...+65°C / -40...+149°F and compact version with stainless steel converter housing and with stainless steel flanges: -40...+55°C / -40...+130°F
	Standard: DN250...600, remote version with stainless steel converter housing and with carbon steel flanges: -20...+65°C / -4...+149°F and compact version with stainless steel converter housing and with carbon steel flanges: -20...+55°C / -4...+130°F
	Option: DN250...600 with low temperature carbon steel or stainless steel flanges: -40...+65°C / -40...+130°F
Protect electronics against self-heating at ambient temperatures above 55°C / 131°F	
Storage temperature	-50...+70°C / -58...+158°F
Measurement range	-12...+12 m/s / -40...+40 ft/s
Pressure	
Operating pressure	Up to 16 bar / 232 psi for DN25...200 / 1...12" Up to 10 bar / 150 psi for DN250...600 / 14...24"
Vacuum load	0 mbar / 0 psi absolute
Pressure loss	For detailed information refer to <i>Pressure loss</i> on page 22.
Chemical properties	
Physical condition	Water: drinking water, raw water, irrigation water. For salt water please contact the factory.
Electrical conductivity	≥ 20 µS/cm

Installation conditions

Installation	Assure that the flow sensor is always fully filled.
	For detailed information refer to <i>Installation</i> on page 23.
Flow direction	Forward and reverse
	Arrow on flow sensor indicates forward flow direction.
Straight inlet run	≥ 0 DN
	For detailed information refer to <i>Measurement accuracy</i> on page 16.
Straight outlet run	≥ 0 DN
	For detailed information refer to <i>Measurement accuracy</i> on page 16.
Dimensions and weights	For detailed information refer to <i>Dimensions and weights</i> on page 18.

Materials

Sensor housing	Sheet steel
Measuring tube	DN25...200 / 1...8": metallic alloy
	DN250...600 / 10...24": stainless steel
Flanges	DN250...600 / 10...24": steel 1.0460 / 1.0038 (RSt37-2) DN25...200 / 1...8": stainless steel 3.04 (optionally 3.16)
Liner	Rilsan®
Protective coating	On exterior of the meter: flanges, housing, signal converter (compact version) and/or connection box (field version)
	Standard: standard coating
	Option: subsoil or offshore coating
Connection box	Only for remote versions
	Standard: stainless steel
Measuring electrodes	Standard: stainless steel 1.4301 / AISI 304
	Option: Hastelloy® C
Reference electrode	Standard: stainless steel 1.4301 / AISI 304
	Option: Hastelloy® C
Grounding rings	Grounding rings can be omitted when the reference electrode is used.

Process connections

Flange	
EN 1092-1	Standard:
	DN25...200 / 1...8": PN 16
	DN250...600 / 10...24": PN 10
	Optional:
	DN250...600 / 10...24": PN 16 (DN350...600 / 14...24": 10 bar rated)
ASME	1"...12": 150 lb RF (232 psi / 16 bar rated) 14"...24": 150 lb (150 psi / 10 bar rated)
JIS	DN25...300 / 1"...12": 10 K DN350...600 / 14"...24": 7.5 K
AS 4087	DN25...600 / 1"...24": Class 16: on request (DN350...600 / 14"...24": 10 bar rated)
AS 2129	DN25...600 / 1"...24": Table D & E: on request (DN350...600 / 14"...24": 10 bar rated)
For detailed information of nominal flange pressure and nominal diameter refer to <i>Dimensions and weights</i> on page 18.	
Other connections	
Thread	DN25 / 1": G1" thread connection on request
	DN40 / 1½": G1.5" & G2" thread connection on request
Other	Weld-on, clamp, oval flanges: on request

Electrical connections

	For detailed information refer to the documentation of the relevant signal converter.
Signal cable (remote versions only)	
Type A (DS)	In combination with the IFC 050, IFC 100 and the IFC 300 signal converter. Standard cable, double shielded. Max. length: 600 m / 1950 ft (depends on electrical conductivity and measuring sensor). For detailed information refer to the documentation of the relevant signal converter.
Type B (BTS)	Only in combination with the IFC 300 signal converter. Optional cable, triple shielded. Max. length: 600 m / 1950 ft (depends on electrical conductivity and measuring sensor). For detailed information refer to the documentation of the relevant signal converter.
I/O	For full details of I/O options, including data streams and protocols, see technical datasheet of the relevant signal converter.

Approvals and certificates

CE	
This device fulfills the statutory requirements of the relevant directives. The manufacturer certifies successful testing of the product by applying the conformity mark on the device.	
	For more information on the directives, standards and the approved certifications, please refer to the declaration of conformity supplied with the device or downloadable from the manufacturer's website.
Custody transfer	Only in combination with the IFC 300 signal converter. Directive: 2014/32/EU / UK Regulation 2016 No. 1153 MID Annex III (MI-001) and MID Annex VI (MI-004) type examination certificate (DN25...600 / 1...24") Innerstaatliche Bauartzulassung als Kältezähler (For Germany, Switzerland and Austria)
Other approvals and standards	
Drinking water approvals	ACS, DVGW W270, NSF / ANSI Standard 61, TZW, KIWA (ATA), KTW, WRAS
Protection category acc. to IEC 60529	Standard: IP66/67, NEMA 4/4X/6 Option: IP68 factory, NEMA 6P IP68 field, NEMA 6P IP68 is only available for separate design
Corrosion protection class acc. to ISO 12944-2	Standard: C3 medium Option: off-shore paint C5-I high - C5-M high
Shock test	IEC 60068-2-27 30 g for 18 ms
Vibration test	IEC 60068-2-64 f = 20...2000 Hz, rms = 4.5 g, t = 30 min

2.2 Legal metrology

*MID Annex III (MI-001) is **only** available in combination with the IFC 300 signal converter!*

2.2.1 MID Annex III (MI-001)

All new designs of water meters that are to be used for legal purposes in Europe require certification under the Measurement Instrument Directive (MID) 2014/32/EU / UK Regulation 2016 No. 1153. Annex III (MI-001) of the MID applies to water meters intended for the measurement of the volume of clean, cold or heated water in residential, commercial, and light industrial use. An EC-type examination certificate is valid in all countries of the European Union.

The WATERFLUX 3000 has a type examination certificate and can be verified to the MID Annex III (MI-001) for water meters with diameter DN25...DN600. The conformity assessment procedure followed for the WATERFLUX 3000 is Module B (Type Examination) and Module D (Quality Assurance of the Production Process).

The maximum permissible error on volumes delivered between Q2 (transitional) flow rate and Q4 (overload) flow rate is $\pm 2\%$.

The maximum permissible error on volumes delivered between Q1 (minimum) flow rate and Q2 (transitional) flow rate is $\pm 5\%$.

$$Q1 = Q3 / R$$

$$Q2 = Q1 * 1.6$$

$$Q3 = Q1 * R$$

$$Q4 = Q3 * 1.25$$

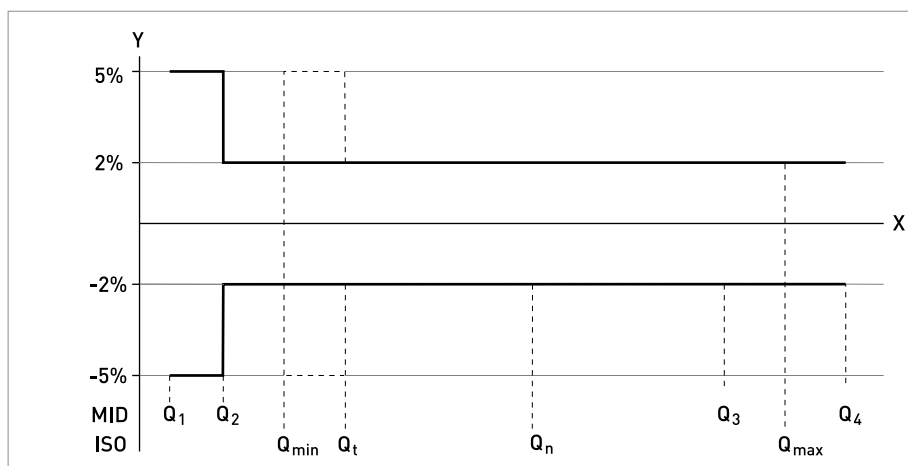


Figure 2-1: ISO flow rates added to figure as comparison towards MID

X: Flow rate

Y [%]: Maximum measuring error

MI-001 certified flow characteristics

DN	Span (R) Q3 / Q1	Flow rate [m ³ /h]			
		Minimum Q1	Transitional Q2	Permanent Q3	Overload Q4
25	640	0.025	0.040	16	20.0
40	640	0.0625	0.100	40	50.0
50	630	0.100	0.160	63	78.75
65	635	0.1575	0.252	100	125.0
80	640	0.25	0.400	160	200.0
100	625	0.40	0.640	250	312.5
125	640	0.625	1.00	400	500.0
150	630	1.00	1.60	630	787.5
200	508	1.575	2.52	630	787.5
250	400	2.50	4.00	1000	1250
300	400	4.00	6.40	1600	2000
350	160	15.625	25.0	2500	3125
400	160	25.00	40.0	4000	5000
450	160	25.00	40.0	4000	5000
500	160	39.375	63.0	6300	7875
600	100	63.00	100.8	6300	7875

2.2.2 Verification to MI-001

Verification to MI-001, standard at the following values for R, Q1, Q2 and Q3.
Verification at other values for R and Q3 available on request.

Verification to MID Annex III (MI-001)

DN	Span (R)	Flow rate [m ³ /h]		
		Q1	Q2	Q3
25	80	0.050	0.08	4
40	80	0.125	0.20	10
50	80	0.200	0.32	16
65	80	0.313	0.50	25
80	80	0.500	0.80	40
100	80	0.788	1.26	63
125	80	1.250	2.00	100
150	80	2.000	3.20	160
200	80	3.125	5.00	250
250	80	5.000	8.00	400
300	80	7.875	12.60	630
350	80	20.00	32.0	1600
400	80	31.25	50.0	2500
450	80	31.25	50.0	2500
500	80	50.00	80.0	4000
600	80	78.75	126	6300

2.3 Measurement accuracy

Every electromagnetic flowmeter is calibrated by direct volume comparison. The wet calibration validates the performance of the flowmeter under reference conditions against accuracy limits.

The accuracy limits of electromagnetic flowmeters are typically the result of the combined effect of linearity, zero point stability and calibration uncertainty.

Reference conditions

- Medium: water
- Temperature: +5...+35°C / +41...+95°F
- Operating pressure: 0.1...5 barg / 1.5...72.5 psig
- Inlet section: ≥ 3 DN
- Outlet section: ≥ 1 DN

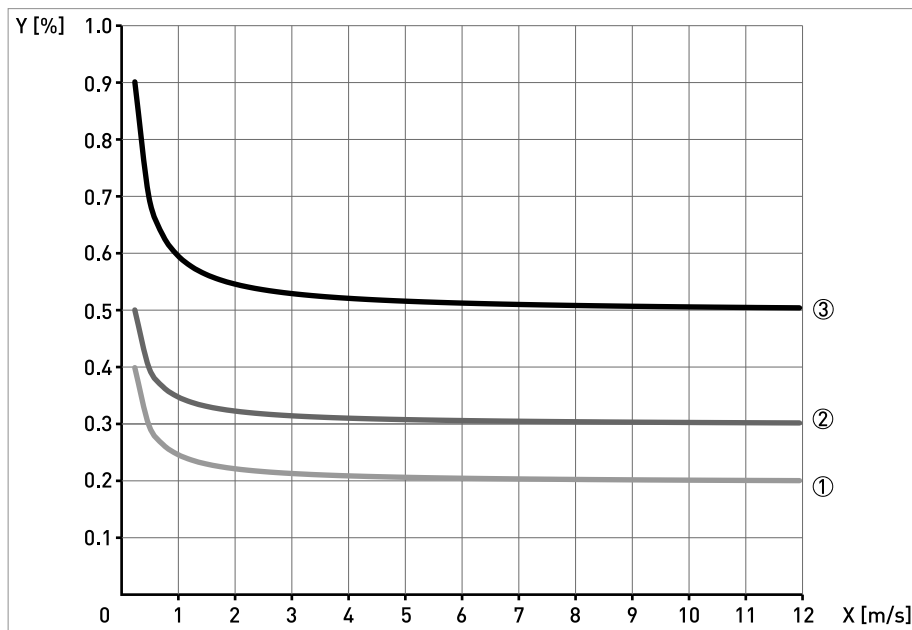


Figure 2-2: Flow velocity vs. accuracy
 X [m/s]: flow velocity
 Y [%]: deviation from the actual measured value

Converter type	Accuracy	Curve
IFC 050	0.5% of mv +1 mm/s	③
IFC 100	0.3% of mv +1 mm/s	②
IFC 300	0.2% of mv +1 mm/s	①

2.3.1 WATERFLUX 3050, 3100 and 3300 without straight inlet and outlet sections




Disturbed flow profiles, such as those that occur behind elbows, tee pieces, reducers or valves installed in front of a flowmeter, affect the measuring performance. Therefore it is usually recommended to fit a straight inlet length in front of and straight outlet length behind a flowmeter.




As a result of the unique WATERFLUX 3000 flow sensor design, whereby the mean flow velocity and flow profile are optimized within the rectangular and reduced cross section, the additional uncertainty for upstream disturbances are drastically reduced. Therefore the requirements for straight length and in front of and behind a meter are reduced.

Type certificate according MID Annex III (MI-001) / UK Regulation 2016 No. 1153

- In combination with the signal converter IFC 300
- Diameter range DN25...600 / 1...24"
- Minimum straight inlet and outlet pipe length of 0 DN
- Bi-directional flow

2.4 Dimensions and weights
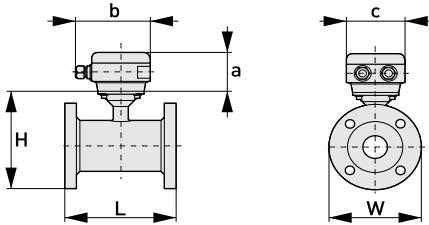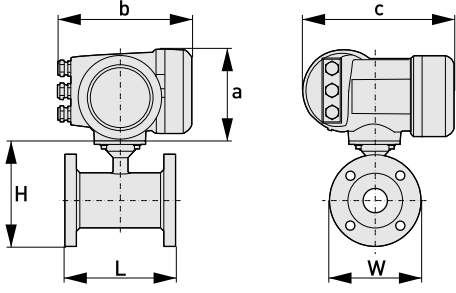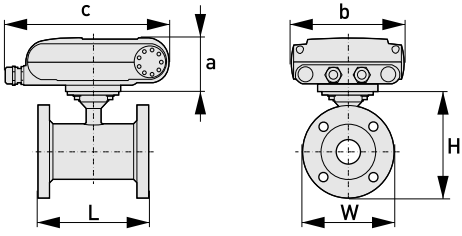
<p>Remote version</p>		<p>a = 88 mm / 3.5"</p> <p>b = 139 mm / 5.5" ①</p> <p>c = 106 mm / 4.2"</p> <p>Total height = H + a</p>
<p>Compact version with: IFC 300</p>		<p>a = 155 mm / 6.1"</p> <p>b = 230 mm / 9.1" ①</p> <p>c = 260 mm / 10.2"</p> <p>Total height = H + a</p>
<p>Compact version with: IFC 100 (0°)</p>		<p>a = 82 mm / 3.2"</p> <p>b = 161 mm / 6.3"</p> <p>c = 257 mm / 10.1" ①</p> <p>Total height = H + a</p>
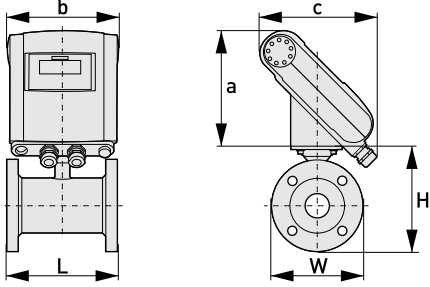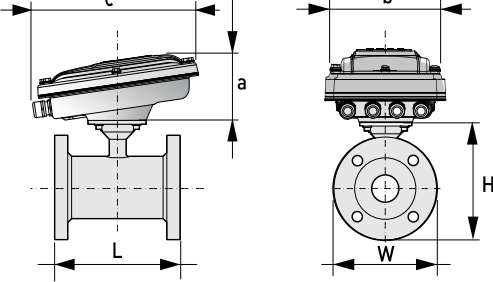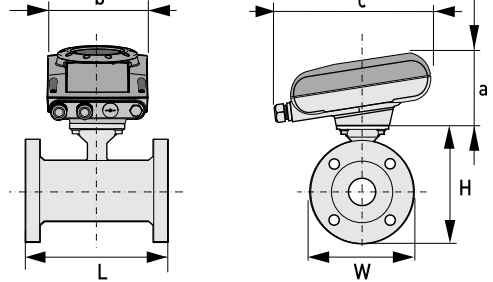
<p>Compact version with: IFC 100 (45°)</p>		<p>a = 186 mm / 7.3" b = 161 mm / 6.3" c = 184 mm / 2.7" ① Total height = H + a</p>
<p>Compact version with: stainless steel IFC 100 (10°)</p>		<p>a = 100 mm / 4" b = 187 mm / 7.36" ① c = 270 mm / 10.63" Total height = H + a</p>
<p>Compact version with: IFC 050 (10°)</p>		<p>a = 101 mm / 3.98" b = 157 mm / 6.18" c = 260 mm / 10.24" ① Total height = H + a</p>

① The value may vary depending on the used cable glands.

- All data given in the following tables are based on standard versions of the flow sensor only.
- Especially for smaller nominal sizes of the flow sensor, the signal converter can be bigger than the flow sensor.
- Note that for other pressure ratings than mentioned, the dimensions may be different.
- For full information on signal converter dimensions see relevant documentation.

EN 1092-1

Nominal size DN [mm]	Dimensions [mm]			Approx. weight [kg]
	L	H	W	
25	150	151	115	5
40	150	166	150	6
50	200	186	165	13
65	200	200	185	11
80	200	209	200	17
100	250	237	220	17
125	250	266	250	21
150	300	300	285	29
200	350	361	340	36
250	400	408	395	50
300	500	458	445	60
350	500	510	505	85
400	600	568	565	110
450	600	618	615	125
500	600	671	670	120
600	600	781	780	180

ASME B16.5 / 150 lb

Nominal size [inch]	Dimensions [inch]			Approx. weight [lb]
	L	H	W	
1	5.91	5.83	4.3	18
1½	5.91	6	4.9	21
2	7.87	7.05	5.9	34
3	7.87	8.03	7.5	42
4	9.84	9.49	9.0	56
5	9.84	10.55	10.0	65
6	11.81	11.69	11.0	80
8	13.78	14.25	13.5	100
10	15.75	16.3	16.0	148
12	19.7	18.8	19.0	210
14	27.6	20.7	21	290
16	31.5	22.9	23.5	370
18	31.5	24.7	25	420
20	31.5	27	27.5	500
24	31.5	31.4	32	680

2.5 Pressure loss

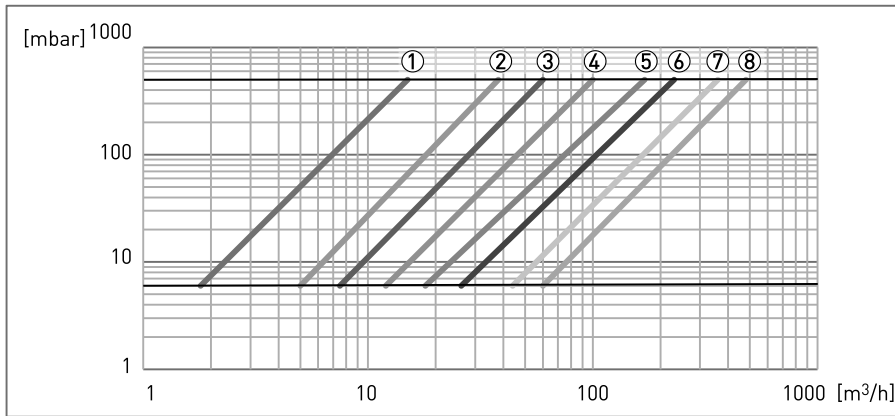


Figure 2-3: Pressure loss between 1...9 m/s / 3.3...30 ft/s for DN25...150 / 1...6"

- ① DN25 / 1"
- ② DN40 / 1½"
- ③ DN50 / 2"
- ④ DN65 / 2½"
- ⑤ DN80 / 3"
- ⑥ DN100 / 4"
- ⑦ DN125 / 5"
- ⑧ DN150 / 6"

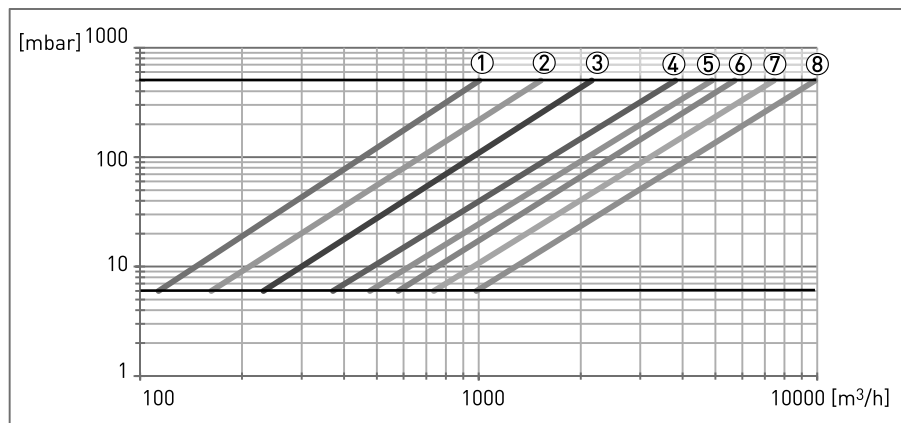


Figure 2-4: Pressure loss between 1...9 m/s / 3.3...30 ft/s for DN200...600 / 8...24"

- ① DN200 / 8"
- ② DN250 / 10"
- ③ DN300 / 12"
- ④ DN350 / 14"
- ⑤ DN400 / 16"
- ⑥ DN450 / 18"
- ⑦ DN500 / 20"
- ⑧ DN600 / 24"

3.1 General notes on installation

Inspect the packaging carefully for damages or signs of rough handling. Report damage to the carrier and to the local office of the manufacturer.

Do a check of the packing list to make sure that you have all the elements given in the order.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

3.2 Intended use

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

This electromagnetic flowmeter is designed exclusively to measure the flow of drinking water, raw water and irrigation water.

If the device is not used according to the operating conditions (refer to chapter Technical data), the intended protection could be affected.

3.3 Pre-installation requirements

Make sure that you have all necessary tools available:

- Allen key (4 mm)
- Small screwdriver
- Wrench for cable glands (remote version only)
- Wrench for wall mounting bracket (remote version only)
- Torque wrench for installing flowmeter in pipeline

3.4 General requirements

The following precautions must be taken to ensure reliable installation.

- Make sure that there is adequate space to the sides.
- Protect the signal converter from direct sunlight and install a sun shade if necessary.
- Signal converters installed in control cabinets require adequate cooling, e.g. by fan or heat exchanger.
- Do not expose the signal converter to intense vibrations and mechanical shocks. The measuring devices are tested for a vibration/shock level as described in the chapter "Technical data".
- Avoid magnetic field! Keep at least 5 DN distance between electromagnetic flow sensors.

3.4.1 Vibrations

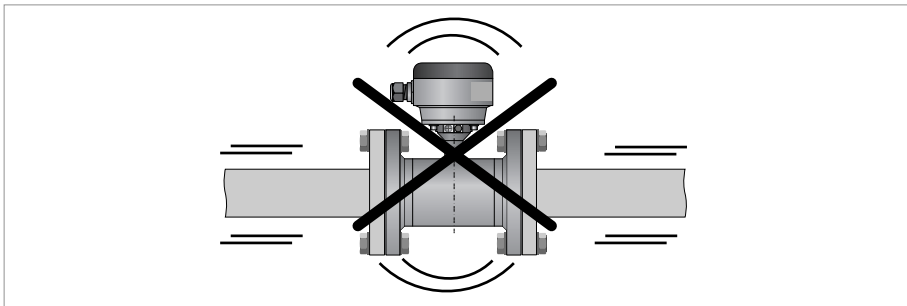


Figure 3-1: Avoid vibrations

3.4.2 Magnetic field

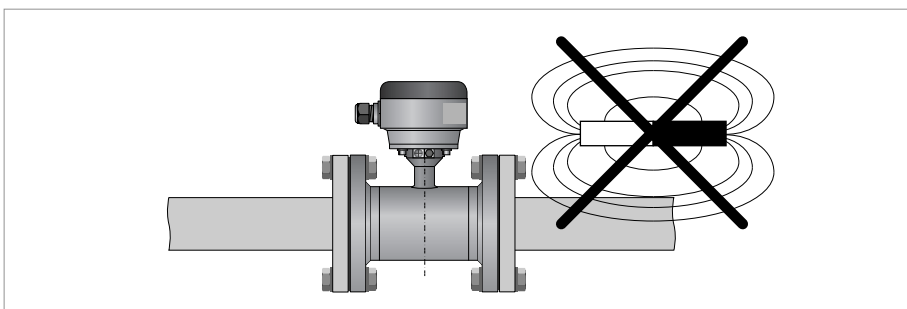


Figure 3-2: Avoid magnetic field

Keep at least 5 DN distance between electromagnetic flow sensors.

3.5 Installation conditions

To prevent damage to the Rilsan® coating, the WATERFLUX 3000 flow sensor must be installed carefully. Take precautions during transport and installation to protect the in- and outlet of the flow sensor.

3.5.1 Inlet and outlet section

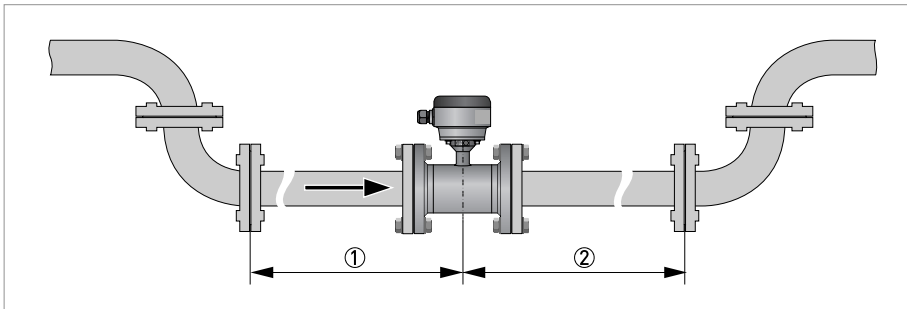


Figure 3-3: Minimal inlet and outlet section

- ① Inlet section: ≥ 0 DN
- ② Outlet section: ≥ 0 DN

3.5.2 T-section

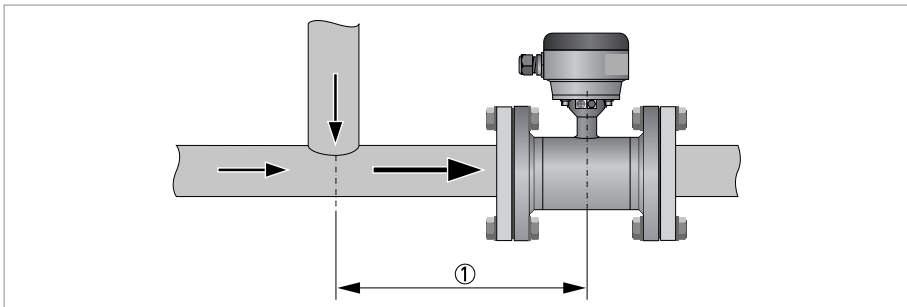


Figure 3-4: Distance behind a T-section

- ① ≥ 0 DN

3.5.3 Open discharge

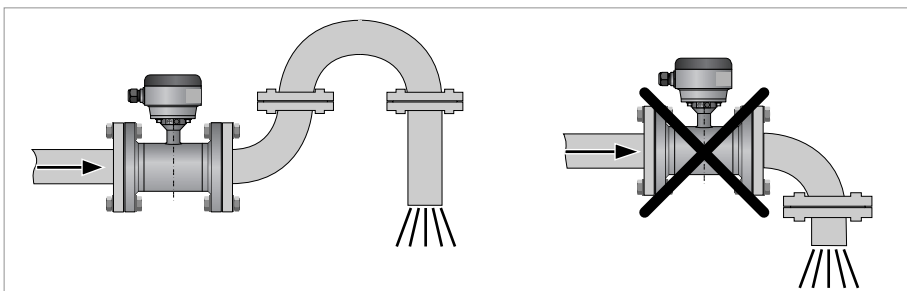


Figure 3-5: Installation in front of an open discharge

3.5.4 Bends

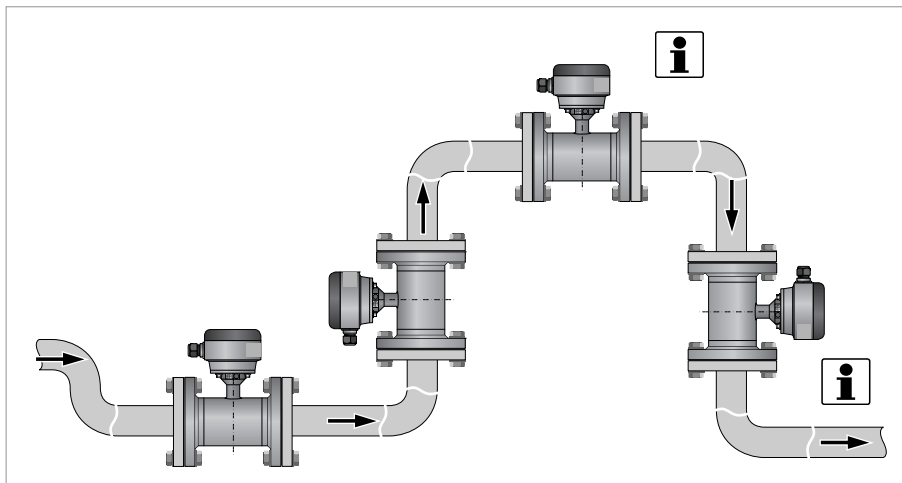


Figure 3-6: Installation in bending pipes (90°)

NOTE!

Recommended installation positions are at a lowered or ascending section of the pipeline installation. Installation at the highest point will enlarge the risk of flowmeter malfunction, because of air/gas bubbles.

Vertical installation in combination with an open discharge has to be avoided.

Vertical installation with a controlled back-pressure is possible.

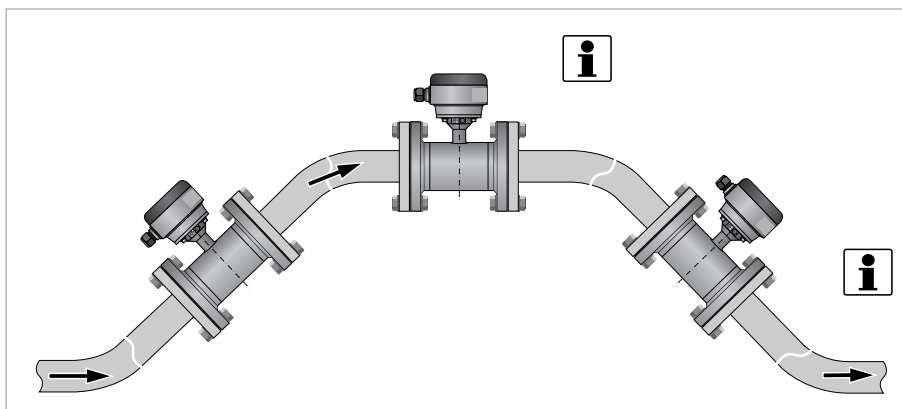


Figure 3-7: Installation in bending pipes (45°)

NOTE!

Vertical installation on a descending slope in the pipeline is only recommended when the back-pressure is controlled.

Avoid draining or partial filling of the flow sensor.

3.5.5 Pump

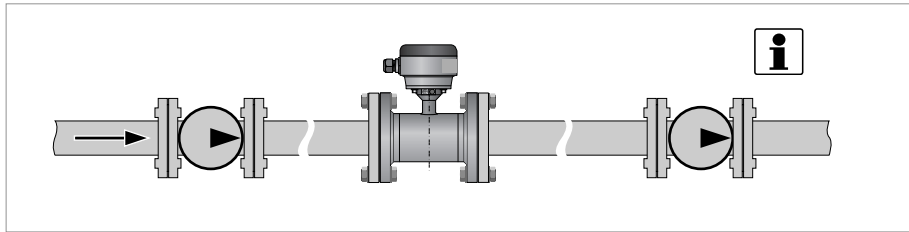


Figure 3-8: Installation behind a pump

NOTE!

Recommended position to install a flowmeter is downstream a pump (on a position where the flow disturbances of the pump are resolved).

An electromagnetic flowmeter can be installed in the suction line of a pump if there is no cavitation in the pipeline system.

3.5.6 Control valve

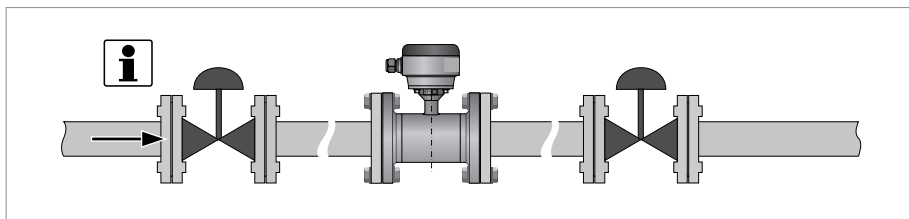



Figure 3-9: Installation in front of a control valve

NOTE!


Recommended position to install a flowmeter is upstream a control valve.

An electromagnetic flowmeter can be installed downstream of the control valve if there is no cavitation in the pipeline system (e.g. flow profile disturbances are resolved).

3.5.7 Air venting and vacuum forces

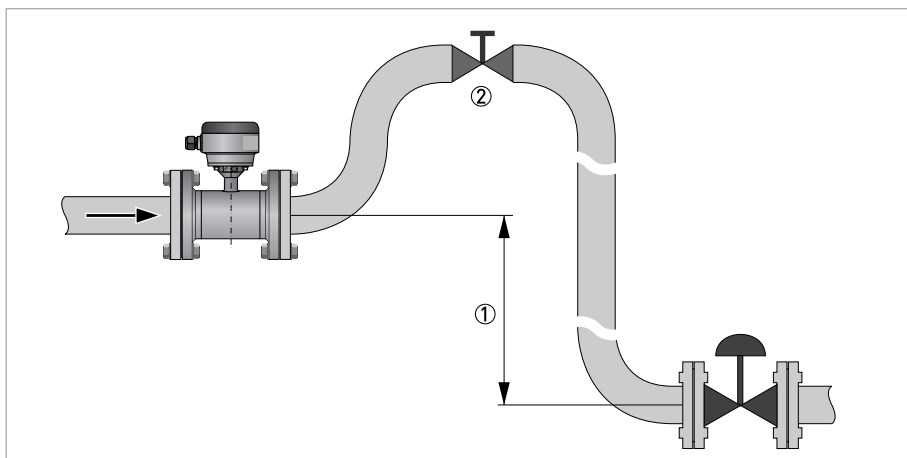**Figure 3-10: Air venting**

- ① $\geq 5 \text{ m} / 17 \text{ ft}$
- ② Air ventilation point

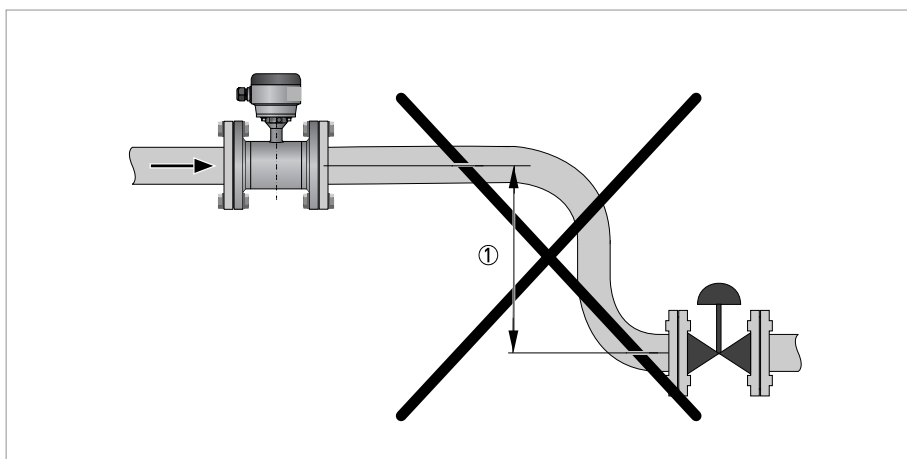**Figure 3-11: Vacuum**

- ① $\geq 5 \text{ m} / 17 \text{ ft}$

3.5.8 Flange deviation

Max. permissible deviation of pipe flange faces:
 $L_{max} - L_{min} \leq 0.5 \text{ mm} / 0.02''$

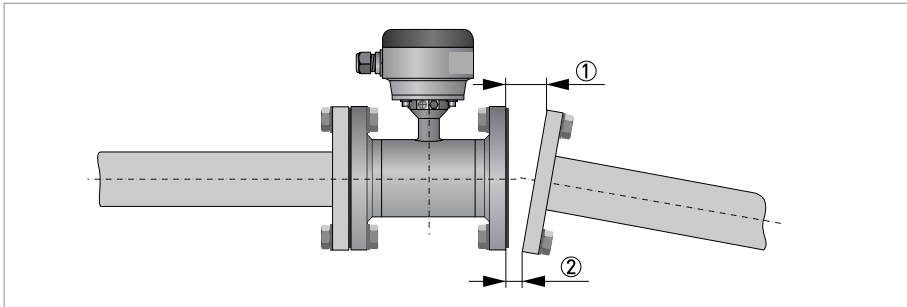


Figure 3-12: Flange deviation

- ① L_{max}
- ② L_{min}

3.5.9 Mounting position

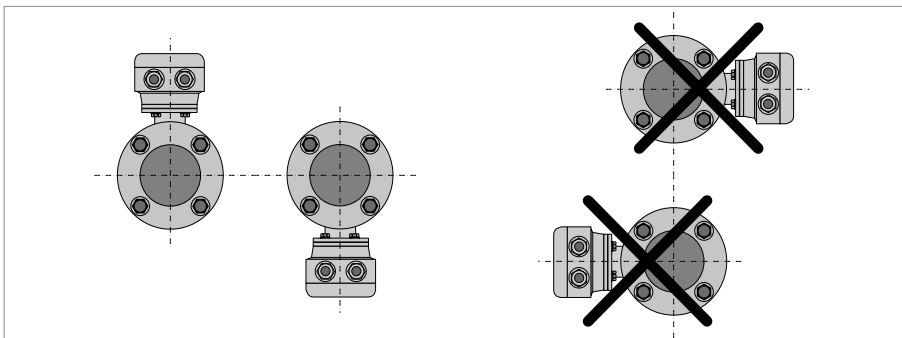


Figure 3-13: Mounting position

- Install the flow sensor with the signal converter aligned upwards or downwards.
- Install the flow sensor in line with the pipe axis.
- Pipe flange faces must be parallel to each other.

3.5.10 Installation in a metering pit and subsurface applications

The WATERFLUX 3000 flow sensor is rated IP68, NEMA 6P and is suitable for temporary submersion in flooded measurement chambers. The flow sensor can withstand a 10 meter water column and can be installed (buried) underground also (optional coating for subsurface application).

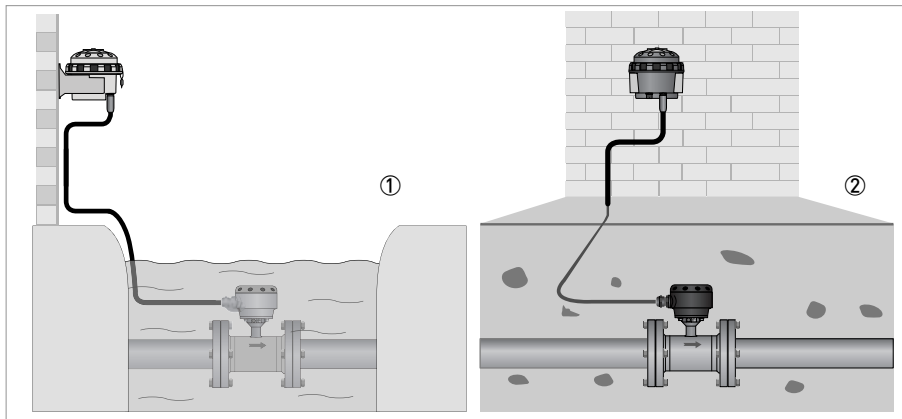


Figure 3-14: Examples of flooded and buried application

- ① Submersible
- ② Buried

The remote version of the IFC 050, IFC 100 and IFC 300 signal converters are IP66/67, NEMA 4/4X rated and can be installed in a dry area on the wall of the measuring pit for visual read out of the display.

Submersion applications

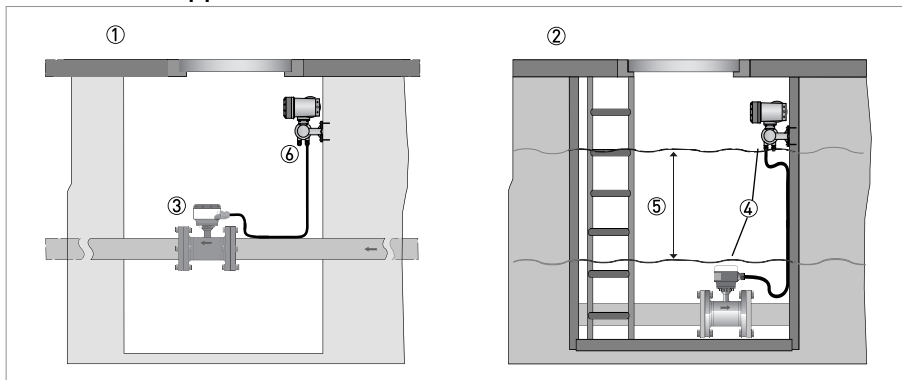


Figure 3-15: Examples of installation in measuring pit

- ① Periodic submersion
- ② Continuous submersion
- ③ Compact version
- ④ Remote version
- ⑤ Maximum water column 10 meter / 33 ft
- ⑥ Signal converter (remote)

3.6 Mounting

3.6.1 Torques and pressures

The maximum pressure and torque values for the flowmeter are theoretical and calculated for optimum conditions and use with carbon steel flanges.

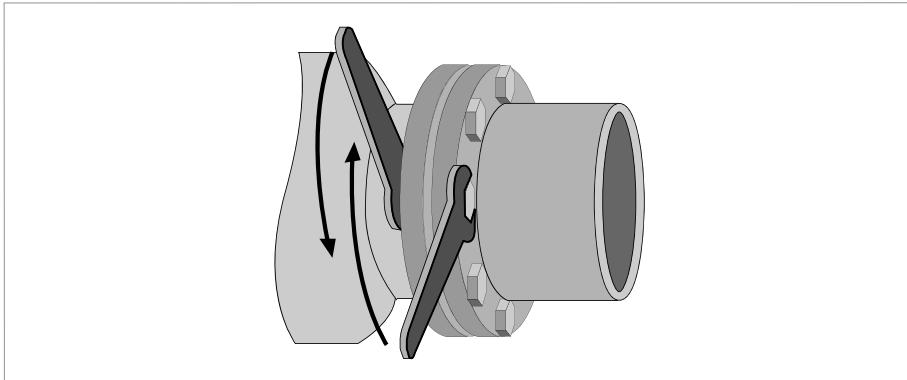


Figure 3-16: Tightening of bolts

Tightening of bolts

- Always tighten the bolts uniformly and in diagonally opposite sequence.
- Do not exceed the maximum torque value.
- Step 1: Apply approx. 50% of max. torque given in table.
- Step 2: Apply approx. 80% of max. torque given in table.
- Step 3: Apply 100% of max. torque given in table.

Nominal size DN [mm]	Pressure rating	Bolts	Max. torque [Nm] ^①
25	PN 16	4 x M 12	12
40	PN 16	4 x M 16	30
50	PN 16	4 x M 16	36
65	PN 16	8 x M 16	50
80	PN 16	8 x M 16	30
100	PN 16	8 x M 16	32
125	PN 16	8 x M 16	40
150	PN 10	8 x M 20	55
150	PN 16	8 x M 20	55
200	PN 10	8 x M 20	85
200	PN 16 ^②	12 x M 20	57
250	PN 10	12 x M 20	80
250	PN 16 ^②	12 x M 24	100
300	PN 10	12 x M 20	95
300	PN 16	12 x M 24	136
350	PN 10	16 x M 20	96
400	PN 10	16 x M 24	130
450	PN 10	20 x M 24	116
500	PN 10	20 x M 24	134
600	PN 10	20 x M 27	173

① The torque values also depend on variables (temperature, bolt material, gasket material, lubricants, etc.) outside the control of the manufacturer. Therefore these values should be regarded as indicative only.

② No full rating (max. 10 bar)

Nominal size [inch]	Flange class [lb]	Bolts	Max. torque [lbs.ft] ^①
1	150	4 x 1/2"	4
1½	150	4 x 1/2"	11
2	150	4 x 5/8"	18
2.5	150	8 x 5/8"	27
3	150	4 x 5/8"	33
4	150	8 x 5/8"	22
5	150	8 x 3/4"	33
6	150	8 x 3/4"	48
8	150	8 x 3/4"	66
10	150	12 x 7/8"	74
12	150	12 x 7/8"	106
14	150 ②	12 x 1"	87
16	150 ②	16 x 1"	84
18	150 ②	16 x 1 1/8"	131
20	150 ②	20 x 1 1/8"	118
24	150 ②	20 x 1 1/4"	166

① The torque values also depend on variables (temperature, bolt material, gasket material, lubricants, etc.) outside the control of the manufacturer. Therefore these values should be regarded as indicative only.

② No full rating (max. 150 psi / 10 bar).

4.1 Safety instructions

*All work on the electrical connections may only be carried out with the power disconnected.
Take note of the voltage data on the nameplate!*

Observe the national regulations for electrical installations!

*Observe without fail the local occupational health and safety regulations.
Any work done on the electrical components of the measuring device may only be carried out by
properly trained specialists.*

*Look at the device nameplate to ensure that the device is delivered according to your order.
Check for the correct supply voltage printed on the nameplate.*

4.2 Grounding

*The device must be grounded in accordance with regulations in order to protect personnel
against electric shocks.*


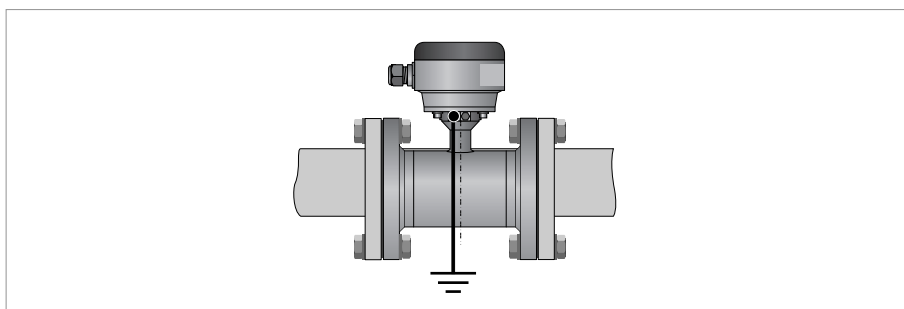


Figure 4-1: Grounding

Grounding without grounding rings. The flow sensor is equipped with a reference electrode.

4.3 Connection diagrams

*For the connection diagrams and more information on the connection of the flow sensor, please
refer to the documentation of the applicable signal converter.*

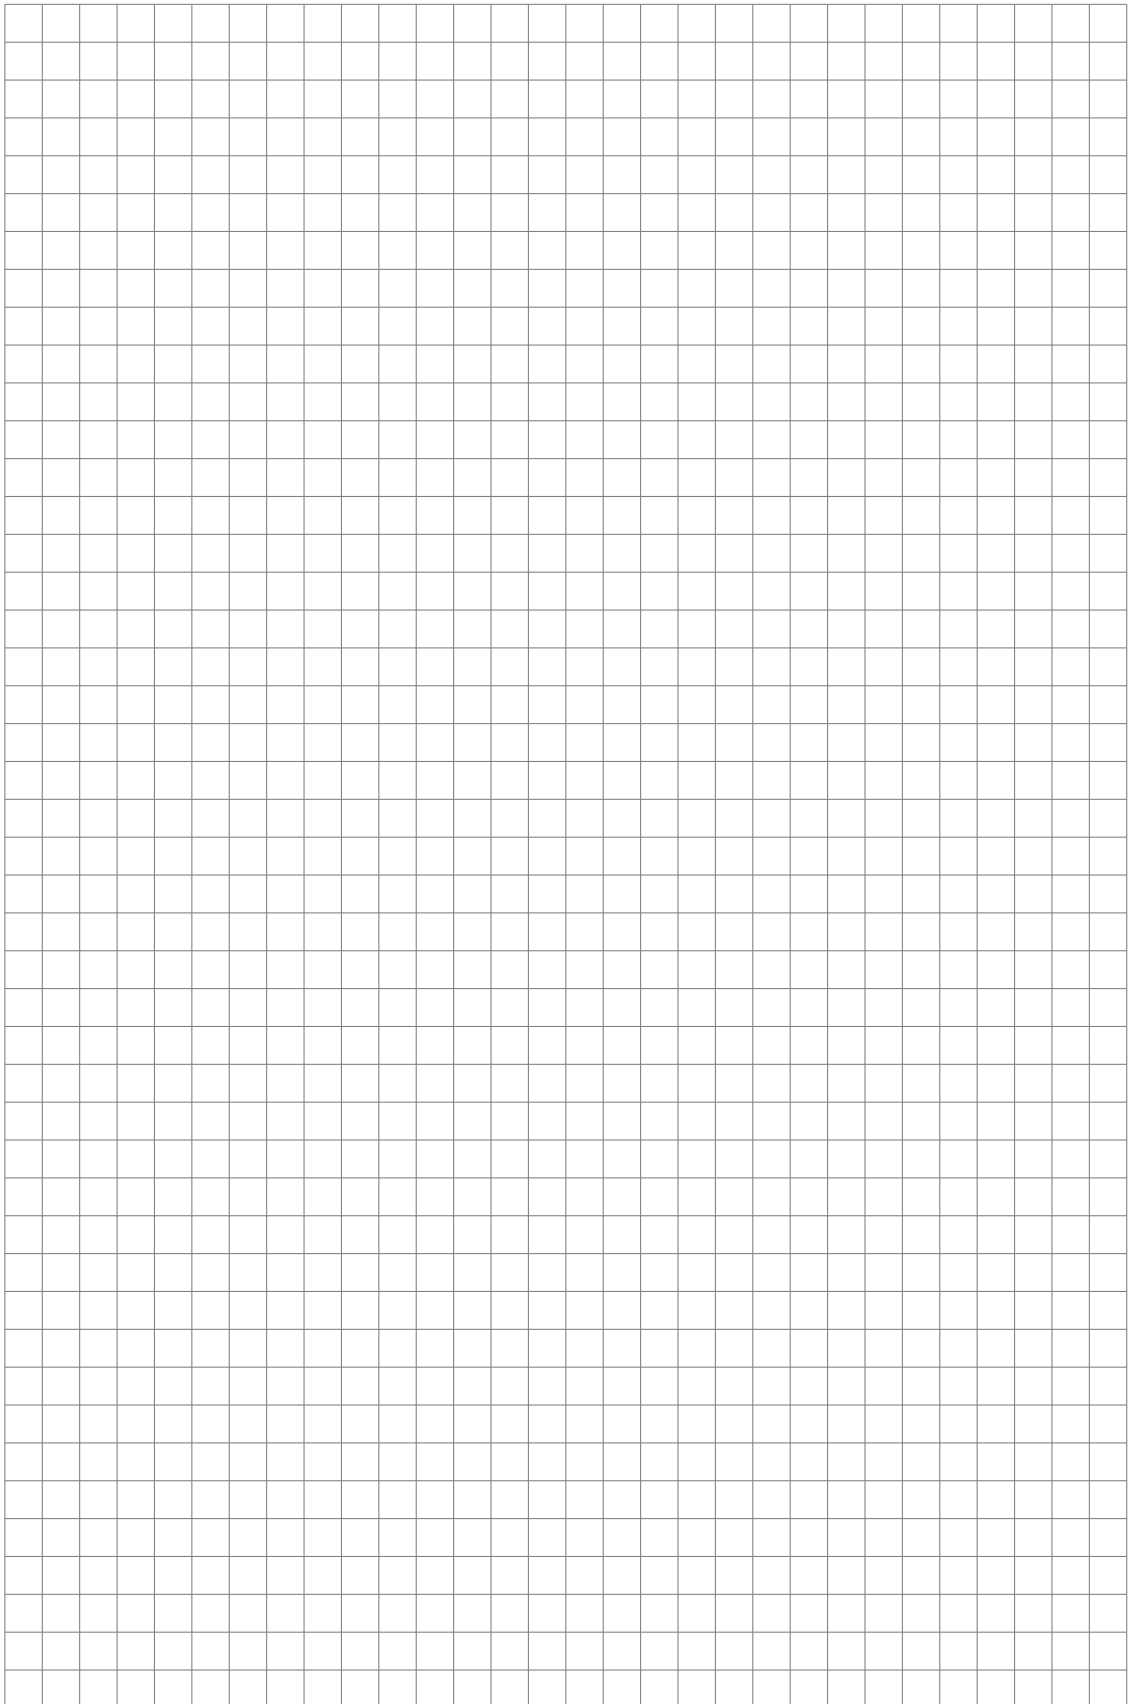

KROHNE – Products, Solutions and Services

- Process instrumentation for flow, level, temperature, pressure measurement and process analytics
- Flow metering, monitoring, wireless and remote metering solutions
- Engineering, commissioning, calibration, maintenance and training services

Head Office KROHNE Messtechnik GmbH
Ludwig-Krohne-Str. 5
47058 Duisburg (Germany)
Tel.: +49 203 301 0
Fax: +49 203 301 10389
info@krohne.de

The current list of all KROHNE contacts and addresses can be found at:
www.krohne.com

