KROHNE

09/97

Electromagnetic flowmeters for water and seewage

- Primary head
- Compact flowmeters



AQUAFLUX
F
010 K
020 K
080 K



CONTENTS

Storage and transport	Pages 3-4
Installation in the pipeline	Pages 4-5 and 7-8
Grounding	Page 9





3.1M68EA1 099721

Contents									
System description Product liability and warranty Standards and approvals Items included with supply	2 2 2 3								
 Important information for installation: PLEASE NOTE Suggestions for installation Instrument nameplate Flowmeter versions Installation in the pipeline Torques Grounding Replacement of separate primary head Technical data Dimensions and weights Limits 	4-5 5 6 7 8 9 10 10-11 12-13 14								
Printed form to accompany flowmeters returned to Krohne	15								

System description

AQUAFLUX electromagnetic flowmeters are precision measuring instruments designed for the linear flow measurement of process liquids.

The process liquids must be electrically conductive: $\geq 20 \ \mu$ S/cm

This is equivalent to a flow velocity of 0.3 - 12 m/s, or 1 - 40 ft/s.

Product liability and warranty

AQUAFLUX electromagnetic flowmeters are designed solely for measuring the volumetric flowrate of electrically conductive, liquid process products.

Flowmeters with AQUAFLUX primary heads are not certified for use in hazardous locations. Other flowmeters series are available for such applications.

Responsibility as to suitability and intended use of these electromagnetic flowmeters rests solely with the operator.

Improper installation and operation of the flowmeters (systems) may lead to loss of warranty.

In addition, the "General conditions of sale" forming the basis of the purchase contract are applicable.

If AQUAFLUX flowmeters need to be returned to Krohne, please note the information given on the last-but-one page of this manual. Krohne regret that they cannot repair or check your flowmeter(s) unless accompanied by the completed form sheet.

Standards and approvals

Please refer to the installation and operating instructions for the signal converter.

AQUAFLUX F primary heads

- Primary head in the size as ordered
- Connecting wires for grounding, refer to Section 7 "Grounding"
- Certificate of calibration data
- Grounding rings (optional), if ordered
- Installation instructions

AQUAFLUX 010 K, 020 K and 080 K compact flowmeters

- Compact flowmeter in the size as ordered
- Connecting wires for grounding, see Section 7 "Grounding"
- Certificate of calibration data
- Grounding rings (optional), if ordered
- Installation instructions
- Installation and operating instructions for the signal converter

Fitting accessories (stud bolts, nuts, gaskets, etc.) are not supplied with the flowmeter, to be provided by customer!


Handling

Do not lift flowmeter by the signal converter housing or the terminal box.

Do not set flowmeter down on signal converter housing or terminal box.





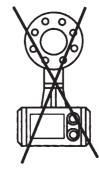

PLEASE NOTE the temperature limits for storage and transport, see Page 4.

1 Important information for installation: PLEASE NOTE !


Use only solventless detergents to clean the signal converter housing (polycarbonate).

Temperatures

Refer to Section 11 "Limits" for operating pressure and vacuum load based on flange standards and type of tube liner.

	Ambient temperature	Process temperature				
Compact systems	-25 to +60 °C (-13 to +140 °F)	-25 to ≤ + 60 °C (-13 to ≤ + 140 °F)				
	-25 to +40 °C (-13 to +104 °F)	-25 to ≤ +90 °C (-13 to ≤ +194 °F)				
AQUAFLUX F	-25 to +60 °C (-13 to +140 °F)	-25 to > +60 °C (-13 to > +140 °F)				
In storage	-20 to +60 °C (-04 to +140 °F), kept i avoid moisture and sunlight.	mmobile,				
Transport	- 5 to + 50 °C (- 4 to + 140 °F), avoid moisture and sunlight.					

- Location and position as required, but electrode axis X - • - • - • - X must be approximately horizontal in a horizontal pipe run.
 - Y terminal box or converter housing

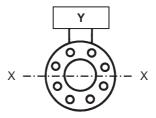


- Measuring tube must be completetly filled at all times.
- **Direction of flow is arbitrary.** Arrow on flowmeter can normally be ignored. For exceptions, refer to Section "Factory settings" in the installation and operating instructions for the signal converter.
- Stud bolts and nuts: to fit, make sure there is sufficient room next to the pipe flanges.
- Vibration: support the pipeline on both sides of the compact flowmeter. Level of vibration in conformity with IEC 068-2-34: below 2.2g for compact flowmeters in the frequency range of <u>20-50 Hz with the IFC 010 K / IFC 020 K</u> and <u>20-150 Hz</u> with the IFC 090 K.
- Do not expose to direct sunlight, fit a sunshade if necessary, not included with flowmeter, to be provided by customer.
- Large meter sizes (≥ DN 200 / ≥ 8"): use adapter pipes to allow axial shifting of the counterflanges and to facilitate installation.

- Strong electromagnetic fields, avoid in vicinity of flowmeter
- Straight inlet run minimum of 5 × DN and outlet run minimum of 2 × DN, (DN = meter size), measured from the electrode axis.
- Vortex and corkscrew flow: increase length of inlet and outlet runs or install flow conditioners.
- Mixing different process liquids: install flowmeter upstream of mixing point or at an adequate distance downstream (minimum of 30 × DN), otherwise display may be unsteady.
- Plastic pipes and internally coated metal pipelines: grounding rings required, see Section 7 "Grounding".
- Insulated pipeline: do not insulate flowmeter
- Zero setting not necessary. To check, it should be possible to set "zero" flow velocity in the completely filled measuring tube. Shutoff valves should therefore be provided either downstream of the flowmeter or upstream and downstream of the flowmeter.

2 Suggestions for installation

To avoid measuring errors due to gas/air inclusion or to pipe running empty, please observe the following:

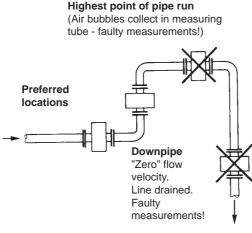


Horizontal pipe run


Install in slightly ascending pipe section. If not possible, assure adequate velocity to prevent air, gas or vapor from collecting in uppper part of flow tube.

Open feed or discharge

Install meter in low section of pipe.

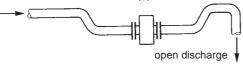


Downpipe over 5 m (16 ft) length Install air valve \otimes downstream of flowmeter.

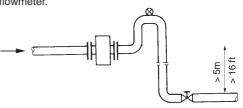


Long pipeline Always install control and shutoff valves downstream of flowmeter.



Pumps Never install flowmeter on pump suction side.

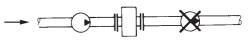

AQUAFLUX F

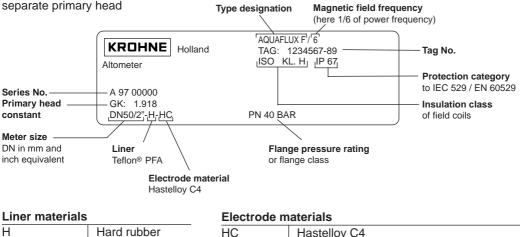

Н	Hard rubber	HC	Hastelloy C4
Т	Teflon [®] -PTFE		Titanium
·		V4A	Stainless steel 1.4571/SS 316-Ti

Teflon® is a registered trademark of Du Pont

Instrument nameplate for compact flowmeters

see installation and operating instructions for the signal converter.

4 Flowmeter versions

AQUAFLUX F Separate primary head (F), electrically connected to the signal converter by signal and field current cables.


AQUAFLUX 010 K, Compact flowmeter (K), IFC 010 K or IFC 020 K signal converter mounted AQUAFLUX 020 K direct on the primary head.

AQUAFLUX 080 K Compact flowmeter (K), IFC 090 K signal converter mounted direct on the primary head.

5 Installation in the pipeline

- **Installation material not included,** to be provided by customer (stud bolts, nuts, gaskets, etc.)
- **Pipe flanges and operating pressure:** refer to tables on "limits" in Section 11.
- Distance between pipe flanges see fitting dimension "a", in Section 10 "Dimensions and weights".

Position of flanges Install flowmeter in line with the pipe axis. Pipe flange faces must be parallel to each other, max. permissible deviation: $L_{max} - L_{min} \le 0.5 \text{ mm}$ ≤ 0.02 "

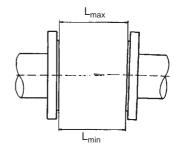

Hard rubber liner

Please note the table on Page 4 for temperature limits of operation, storage and transport.

Teflon[®]-PTFE liner

Install at the lowest point of the pipe run to avoid an excessive vacuum condition at the meter. Do not remove or damage liner, which is formed around the flange edges.

Gaskets

Use gaskets suitable for the application and appropriate to the liner, not included with flowmeter, to be provided by customer.

• Grounding rings / protective rings (option)

On plastic pipes and internally coated metal pipelines, grounding rings must form the conductive connection with the fluid. Refer to Section 7 "Grounding for electrical connection.


Grounding ring No. 1


3 mm/0.12" thick


for flowmeters with Teflon[®]-PTFE liner, solidly fitted to the flanges, 3 mm/0.12" thick

Grounding ring, protective ring No. 2 Grounding ring, protective ring No. 3

with cylindrical neck, to protect the liner particularly at the inlet edge against abrasive products, 3 mm/0.12" thick. Length: 30 mm/1.18", for \leq DN 300, \leq 12" 100 mm/3.94", for \geq DN 350, \geq 14"

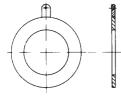

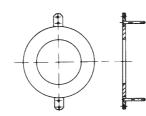

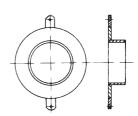

Teflon® is a registered trademark of Du Pont.

6 Torques

• Tighten stud bolts uniformly in diagonally opposite sequence, see table for number and type.

Column A Torques for Teflon®-PTFE liner.

Column B

Torques for liner made of hard rubber.

• 10 Nm ~ 1.0 kpm ~ 7.23 ft × lbf

Meter size DN	Pressure rating	Bolts	Max. torque Nm (ft × lbf)					
mm	PN		Α	В				
10	40	4 × M 12	7.6 (5.5)					
15	40	4 × M 12	9.3 (6.7)					
20	40	4 × M 12	16 (11.6)					
25	40	4 × M 12		11 (8.0)				
32	40	4 × M 16		19 (13.0)				
40	40	4 × M 16		25 (18.1)				
50	40	4 × M 16		31 (22.4)				
65	16	4 × M 16		42 (30.4)				
65	40	8 × M 16		21 (15.2)				
80	25	8 × M 16		25 (18.1)				
100	16	8 × M 16		30 (21.7)				
125	16	8 × M 16		40 (28.9)				
150	16	8 × M 20		47 (34.0)				
200	10	8 × M 20		68 (49.2)				
200	16	12 × M 20		45 (32.5)				
250	10	12 × M 20		65 (47.0)				
250	16	12 × M 24		78 (56.4)				
300	10	12 × M 20		76 (54.9)				
300	16	12 × M 24		105 (75.9)				
350	10	16 × M 20		75 (54.2)				
400	10	16 × M 24		104 (75.2)				
450	10	20 × M 24		93 (67.2)				
500	10	20 × M 24		107 (77.4)				
600	10	20 × M 27		138 (99.8)				
700	10	20 × M 27		163 (117.8)				
800	10	24 × M 30		219 (158.3)				
900	10	28 × M 30		205 (148.2)				
1000	10	28 × M 35		261 (188.7)				

Meter size	Body pressure rating	Bolts for ANSI class 150	Max. Nm	torque (ft × lbf)			
inch	lb	flanges	Α	В			
3/8	580	4 x ¹ /2"	3.5 (2.5)				
1/2	580	4 x ¹ /2"	3.5 (2.5)				
3/4	580	4 x 1/2"	4.8 (3.5)				
1	580	4 x 1/2"		4.4 (3.2)			
1 ¹ /2	580	4 x 1/2"		12 (8.7)			
2	580	4 x ⁵ /8"		23 (16.6)			
2 3 4	360	4 x 5/8"		39 (28.2)			
	230	8 x ⁵ /8"		31 (22.4)			
6	230	8 x ³ /4"		51 (36.9)			
8	145	8 x ³ /4"		69 (49.9)			
10	145	12 x ⁷ /8"		79 (57.1)			
12	145	12 x ⁷ /8"		104 (75.2)			
14	145	12 × 1"		93 (76.2)			
16	145	16 × 1"		91 (65.8)			
18	145	16 × 1 ¹ /8"		143 (103.4)			
20	145	20 × 1 ¹ /8"		127 (91.8)			
24	145	20 × 1 ¹ /4"		180 (130.1)			
28	145	28 × 1 ¹ /4"		161 (116.4)			
32	145	28 × 1 ¹ /2"		259 (187.3)			
36	145	32 × 11/2"		269 (194.5)			
40	145	36 × 11/2"		269 (194.5)			

Note: Process pressure must not exceed ANSI flange rating. Refer to ANSI Standard B 16.5.

7 Grounding

- All flowmeters must be properly grounded to avoid personnel shock hazard.
- The ground conductor should not transmit any interference voltages, therefore do not ground any other electrical devices together with this conductor.

AQUAFLUX F separate primary head with terminal box

- An **FE functional ground** must always be connected.
- Signal converter with field power supply > 125 mA / 60 V a PE protective conductor must be connected to the primary head, because of the higher field current from the signal converter. See grounding diagrams below.


AQUAFLUX 010 K, 020 K and 080 K compact systems

Supply power > 50 V AC

- Grounding is via the PE protective ground conductor incorporated in the power supply cable, see also Section "Connection to power" in the installation and operating instructions for the signal converter.
- EXCEPTION: Do not connect up the PE protective ground conductor in the terminal box if e.g. compact units are operated in the proximity of electric furnaces, electrolysis plants, etc., and large potential differences occur in the pipeline system. An FE functional ground must simultaneously take over the function of the protective conductor (combined protective/functional ground). Refer to appropriate national codes for specific requirements for this type of installation, which may require the addition of a ground fault detection circuit interrupter.

Power supply 24 V AC or DC

- Protective separation (PELV) must be ensured (VDE 0100 / VDE 0106 or IEC 364 / IEC 536 or equivalent national regulations).
- An FE functional ground conductor must be connected for measurement reasons.

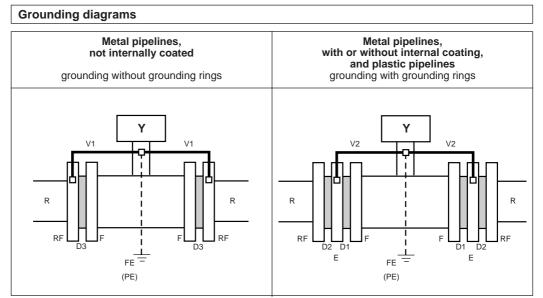

D1, D2, D3 Gaskets, not included with supply, to be provided by customer.

- E Grounding rings (option)
- F Flowmeter flanges
- FE Functional ground, wire ≥ 4 mm² Cu (10 AWG), not included with flowmeter, to be provided by customer PE Protective conductor required if the AQUAFLUX F is operated with a signal converter that supplies a field current of > 125 mA / > 60 V.
 - Wire \geq 4 mm² Cu (10 AWG), not included with flowmeter, to be provided by customer.
- R Pipeline
- RF Pipe flanges
- V1, V2 Interconnecting wires, included with flowmeter
- Y Terminal box or signal converter

8 Replacement of the separate primary head

Switch off power source before commencing work !

- 1) Note down terminal assignment before dismantling the "old" primary head.
- 2) Install the new primary head as described in the supplied installation instructions.
- 3) Make electrical connection at the signal converter as described in the installation and operating instructions for the signal converter.
- 4) Specific calibration data are defined during factory calibration for each primary head, which are indicated on the instrument nameplate. This includes the primary constant GK and the magnetic field frequency. These data need to be reset in the signal converter.
- 5) If the size of primary head is also different from the old one, the full-scale range $Q_{100\%}$ and the meter size will need to be reset.
- 6) After resetting the signal converter, carry out a zero point check.
- 7) If necessary, reset the internal electronic totalizer of the signal converter.

9 Technical data							
Meter sizes							
Compact systems AQUAFLUX F (separate)	DN 10 - 1000 and $\frac{3}{8}$ " - 40 DN 10 - 3000 and $\frac{3}{8}$ " - 120						
Pipe flanges to DIN 2501 (= BS 4504)	DN 10 – 50 and DN 80 / PN DN 65 and DN 100 – 150 / F DN 200 – 1000 / PN 10 DN 1100 – 2000 / PN 6 DN 2200 – 3000 / PN 2.5	PN 16					
to AWWA	³ / ₈ " – 24" / Class 150 lb / R 14" – 120" / Class B or D / F						
Electrical conductivity	\geq 20 µS/cm						
Temperatures Compact systems	Ambient temperatureProcess temperature $-25 \text{ to} + 60^{\circ}\text{C}$ $-5 \text{ to} \le + 60^{\circ}\text{C}$ $-13 \text{ to} + 140^{\circ}\text{F}$ $+23 \text{ to} \le + 140^{\circ}\text{F}$						
	− 25 to + 40 °C − 13 to + 104°F	– 5 to + 90°C + 23 to + 194°F					
AQUAFLUX F (separate)	– 25 to + 60°C – 13 to + 140°F	− 5 to + 90°C + 23 to + 194°F					
Max. allowable operating data	Process temperature, operator for the liner, refer to Page 3	ting pressure and vacuum load "Limits"					
Insulation class of field coils	E						
Electrode design DN 10 - 3000 / ³ /8" - 120"	flat elliptical electrodes, solic surface-polished	-					
<u>Option DN 350 – 3000 / 14" – 120"</u> Protection category (EN 60 529 / IEC 529) Standard	IP 67, equivalent to NEMA 6 (with field replaceable electron equivalent to NEMA 4/4X)	des WE: IP 65,					
Option Grounding rings	IP 68, equivalent to NEMA 6 available as an option						
Materials Measuring tube	stainless steel 1.4301 (or hig equivalent to SS 304	gher materials number),					
Liner DN 10- 20 / ³ /8" - ³ /4" DN 25 - 3000 / 1" - 120"	Teflon [®] -PTFE hard rubber						
Electrodes Standard Option Field replaceable WE	Hastelloy C4 stainless steel 1.4571 or SS stainless steel 1.4571 or SS						
<u>Connecting flanges</u> * DIN: DN 10 – 50, DN 80 (³ / ₈ " – 2", 3") DN 65, ≥ DN 100 (≥ 4") ANSI	steel 1.0402 (C 22) or AISI (steel 1.0501 (RST 37.2) or A steel ASTM A 105 N	C 1020 NSI C 1035					
<u>Housing</u> * DN 10 − 40 / ³ / ₈ "−1 ¹ / ₂ " ≥ DN 50 / ≥ 2"	GTW-S 30 (malleable cast i sheet steel	ron)					
<u>Terminal box</u> * AQUAFLUX F (separate)	die-cast aluminium						
Grounding rings (option)	stainless steel 1.4571 or SS	316 Ti					
* with polyurethane coating	Teflon [®] is a registered trademark of	Du Pont.					

PLEASE NOTE


The **total dimension for the height** is obtained from **dimension b** (see table) **plus the height** of the terminal box or the signal converter, see drawings.

The **total weight** is made up of the weight of the signal converter (see table) **plus** the weight of the terminal box or signal converter, see below.


Terminal box





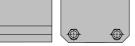

IFC 090 K signal converter

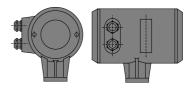

Weight approx. 2.3 kg (5.1 lb)

Weight approx.	
0.5 kg (1.1 lb)	

Weight approx. 1.6 kg (3.6 lb)

Flange connect	ions to	Dimensions in mm (inch)				
DIN 2501	DN 10- 300	PN 40, 16, 10	see table			
(= BS 4504)	DN 350-1000	PN 10	see table			
	DN 350-1000	PN 25	see table, dimension "astandard" + 200 mm			
	≥ DN 1200	PN 6, 2.5	information supplied on request			
ANSI B 16.5	³ /8"-24"	150 lb / RF	see table			
		\geq 300 lb / RF	dimensions supplied on request			
AWWA	≥ 14"	Class B, D / FF	dimensions supplied on request			


• Dimension "a" without flange gaskets: not included with flowmeter, to be provided by customer.


• Meter size 3/8": flange connection 1/2"

Nomi	nal siz	e	Dimer	nsions in	mm (inch)											Approx. weight		
DIN		ANSI	a (fittir	ng length)	,			b		c dia. I			dia. D				in	
DN	PN	inch	Stand			13 359	ANSI						DIN, I	SO	ANSI		kg (lb)		
10	40	3/8	150	(5.91)	-		150	(5.91)	146	(5.75)	121	(4.76)	90	(3.54)	88.9	(3.50)	3.5	(7.7)	
15	40	1/2	150	(5.91)	200	(7.87)	150	(5.91)	146	(5.75)	121	(4.76)	95	(3.74)	88.9	(3.50)	3.5	(7.7)	
20	40	3/4	150	(5.91)	200	(7.87)	150	(5.91)	146	(5.75)	121	(4.76)	105	(4.13)	98.6	(3.88)	5.5	(12.1)	
25	40	1	150	(5.91)	200	(7.87)	150	(5.91)	146	(5.75)	121	(4.76)	115	(4.53)	108	(4.25)	5.5	(12.1)	
32	40	-	150	(5.91)	200	(7.87)	-		161	(6.34)	139	(5.47)	140	(5.51)	-		6.5	(15)	
40	40	11/2	150	(5.91)	200	(7.87)	150	(5.91)	161	(6.34)	139	(5.47)	150	(5.91)	127	(5.00)	6.5	(15)	
50	40	2	200	(7.87)	200	(7.87)	200	(7.87)	199	(7.83)	160	(6.30)	165	(6.50)	152	(6.00)	7.5	(17)	
65	16	-	200	(7.87)	200	(7.87)	-		209	(8.23)	173	(6.81)	185	(7.28)	-		12	(27)	
80	40	3	200	(7.87)	200	(7.87)	200	(7.87)	216	(8.50)	173	(6.81)	200	(7.87)	191	(7.50)	12	(27)	
100	16	4	250	(9.84)	250	(9.84)	250	(9.84)	267	(10.51)	233	(9.17)	220	(8.66)	228	(8.98)	14	(31)	
125	16	-	250	(9.84)	250	(9.84)	-		278	(10.94)	233	(9.17)	250	(9.84)	-		19	(42)	
150	16	6	300	(11.81)	300	(11.81)	300	(11.81)	308	(12.13)	257	(10.12)	285	(11.22)	279	(10.98)	22	(49)	
200	10/16	8	350	(13.78)	350	(13.78)	350	(13.78)	366	(14.41)	291	(11.46)	340	(13.39)	343	(13.50)	45	(100)	
250	10/16	10	400	(15.75)	450	(17.72)	400	(15.75)	418	(16.46)	331	(13.03)	395	(15.55)	406	(16.00)	65	(144)	
300	10/16	12	500	(19.69)	500	(19.69)	500	(19.69)	481	(18.94)	381	(15.00)	445	(17.52)	533	(21.00)	95	(210)	
350	10/16	14	500	(19.69)	550	(21.65)	700	(27.56)	529	(20.83)	428	(16.85)	505	(19.88)	597	(23.50)	135	(298)	
400	10/16	16	600	(23.62)	600	(23.62)	800	(31.50)	587	(23.11)	483	(19.02)	565	(22.24)	635	(25.00)	170	(375)	
500	10/16	20	600	(23.62)	-		800	(31.50)	632	(24.88)	533	(20.98)	670	(26.38)	699	(27.50)	230	(508)	
600	10/16	24	600	(23.62)	-		800	(31.50)	801	(31.54)	585	(23.03)	780	(30.71)	813	(32.00)	315	(695)	
700	10/16	28	700	(27.56)	-		fla	anges	918	(36.14)	694	(27.32)	895	(35.24)	flar	nges	255	(565)*	
800	10/16	32	800	(31.50)	-		to /	AWWA,	1039	(40.91)	922	(36.30)	1015	(39.96)	to A	WWA,	335	(740)*	
900	10/16	36	900	(35.43)	-		dim	ensions	1145	(45.08)	1026	(40.39)	1115	(43.90)	dime	nsions	435	(960)*	
1000	10/16	40	1000	(39.37)	-		on	request	1259	(49.57)	1132	(44.57)	1230	(48.43)	on re	equest	520	(1150)*	

* weight with DIN flanges

DN 10 - 40 / 3/8" - 11/2"

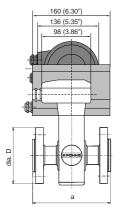

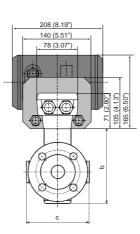

Tolerance details for fitting length dimension "a"


to DIN 2501 and ANSI B 16.5


 $\begin{array}{l} {\sf DN} \leq 300 \ / \leq 12": \pm \ 0.5 \ \%, \\ {\sf min. \pm 1 \ mm} \ / \pm \ 0.04" \\ {\sf DN} \geq 350 \ / \geq 14": \pm \ 0.5 \ \% \end{array}$

to ISO DIS 13 359


 $\begin{array}{l} DN \leq 200 \; / \leq \quad 8": \; \text{+0} \; / \; \text{-3} \\ DN \geq 250 \; / \geq 10": \; \text{+0} \; / \; \text{-5} \end{array}$




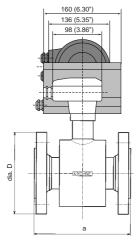

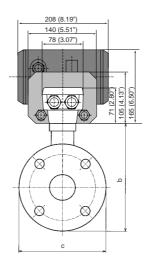

DN 350 - 2000 / 14" - 80"

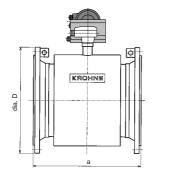

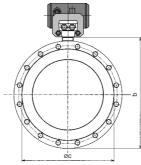

11 Limits

PLEASE NOTE!

- The limits specified in the table for process temperature and operating pressure make allowance for the tube liner and the flange standard. Refer also to the footnotes.
- At ambient temperatures of +40 to +60 °C or +104 to +140 °F the product temperature may not be higher than +60 °C or +140 °F.

Liner	Connection flange					Max. operating pressure in bar (psig)							
	Meter size Flange standard		Pressure rating S = Standard or flange class O = Option		at product temperature ≤ 20 °C (≤ 68 °F)		1	≤ 105 °F)	≤ 60 °C (≤140 °F)	≤ 90 °C (≤ 194 °F)		
PTFE	DN 10-20	DIN 2501	PN 40	S	40	(580)	40	(580)	40	(580)	40	(580)	
	3/8" - 3/4"	ANSI B 16.5	150 lb	S	19.0*	(275)*	18.9*	(274)*	17.9*	(259)*	17.1*	(248)*	
			300 lb	0	40	(580)	40	(580)	40	(580)	40	(580)	
Hard	DN 25 - 50, DN 80	DIN 2501	PN 40	S	40	(580)	40	(580)	40	(580)	40	(580)	
rubber	DN 65, DN 100 - 150	DIN 2501	PN 16 PN 40	S O	16 40	(230) (580)	16 40	(230) (580)	16 40	(230) (580)	16 40	(230) (580)	
	DN 200 - 600	DIN 2501	PN 10 PN 16 PN 25	S O O	10 16 25	(150) (230) (360)	10 16 25	(150) (230) (360)	10 16 25	(150) (230) (360)	10 16 25	(150) (230) (360)	
	DN 700 - 1000	DIN 2501	PN 10 PN 16	S O	<10** <13.8***	(<150)** (<200)***	<9.9 ^{**} (<144) ^{**} <128 ^{***} (<185) ^{***}		<9.5** (<138)** <12.5*** (<181)***		on request on request		
	≥ DN 1200	DIN 2501	PN 6/2.5	S/O	on reque	st	on reque	st	on request		on request		
	1"-40"	ANSI B 16.5	150 lb 300 lb	S O	19.0 * 40	(275) * (580)	18.9 * 40	(274)* (580)	17.9 * 40	(259) * (580)	17.1 * 40	(248) * (580)	
	≥ 14"	AWWA	B D	S O	6 10	(90) (150)	6 10	(90) (150)	6 10	(90) (150)	6 10	(90) (150)	

Limits for pressure and temperature

* with gaskets made of Neoprene or similar material

** dependent on meter size

*** with gaskets made of Neoprene or similar material, dependent on meter size.

Note: Calculated operating pressures to DIN 2505 are much lower than the values in the table above.

Vacuum load

Liner			Max. allowed vacuum load in mbar abs. (psia) at product temperature of							
	DN mm	inch	≤ 20 °C (≤ 68 °F)		≤ 40 °C (≤ 105 °F)		≤ 60 °C (≤ 140 °F)		≤ 80 °C (≤ 176 °F)	
PTFE	DN 10-20	3/8" - 3/4"	0	(0)	0	(0)	0	(0)	0	(0)
Hard rubber	DN 25 – 300 DN 350 – 1000 ≥ DN 1200	1 - 12 14 - 40 ≥ 48"	250 500 on reque	(3.6) (7.3) st	250 500 on requ	(3.6) (7.3) est	400 600 on requ	(5.8) (8.7) est	400 600 on requ	(5.8) (8.7) est

If you need to return flowmeters for testing or repair to Krohne

Your electromagnetic flowmeter

- has been carefully manufactured and tested by a company with ISO 9001 certification
- and volumetrically calibrated in one of the world's most accurate test rigs.

If installed and operated in accordance with these operating instructions, your flowmeter will rarely present any problems.

Should you nevertheless need to return a flowmeter for checkout or repair, please pay strict attention to the following points:

Due to statutory regulations concerning protection of the environment and the health and safety of our personnel, Krohne may only handle, test and repair returned flowmeters that have been in contact with liquids if it is possible to do so without risk to personnel and environment. This means that Krohne can only service your flowmeter if it is accompanied by a certificate in line with the following model confirming that the flowmeter is safe to handle.

If the flowmeter has been operated with toxic, caustic, flammable or water-endangering liquids, you are kindly requested

 to check and ensure, if necessary by rinsing or neutralizing, that all cavities in the flowmeter are free from such dangerous substances.
 (Directions on how you can find out whether the primary

head has to be opened and then flushed out or neutralized are obtainable from Krohne on request.)

 to enclose a certificate with the flowmeter confirming that the flowmeter is safe to handle and stating the liquid used.

Krohne regret that they cannot service your flowmeter unless accompanied by such a certificate.

SPECIMEN certificate

Company:	Address:							
Department:	Name:							
Tel. No.:								
The enclosed electromagnetic flowmeter								
Туре:	Krohne Order No. or Series No.:							
has been operated with the following liquid:								
 Because this liquid is water-endangering * / toxic * / caustic * / flammable * we have checked that all cavities in the flowmeter are free from such substances * flushed out and neutralized all cavities in the flowmeter * (* delete if not applicable) 								
We confirm that there is no risk to man or environment through any residual liquid contained in this flowmeter.								
Date: Signature:								
Company stamp:								